





MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

TYGA Tail Light BPLT-0044 & BPLT-0045

Light Bulb Change

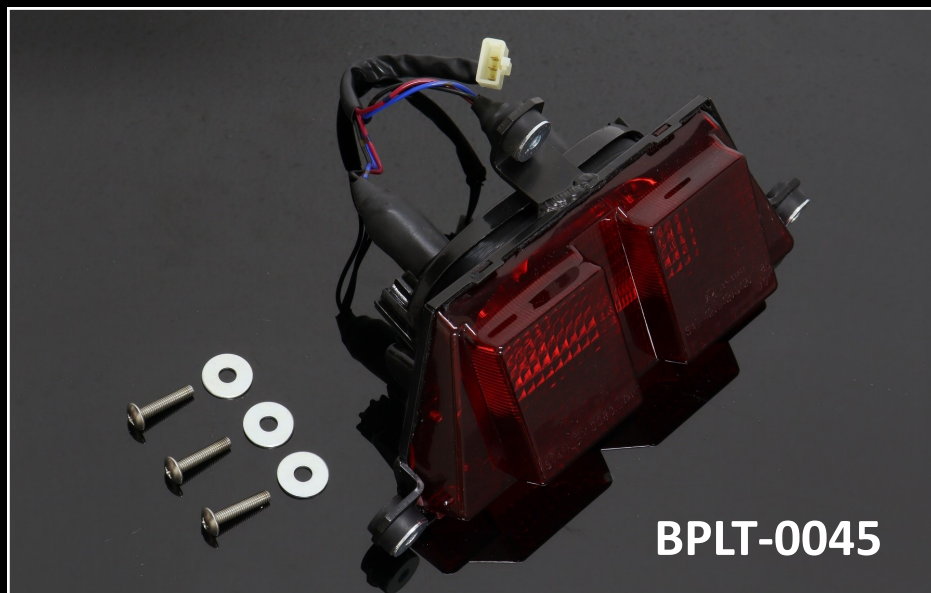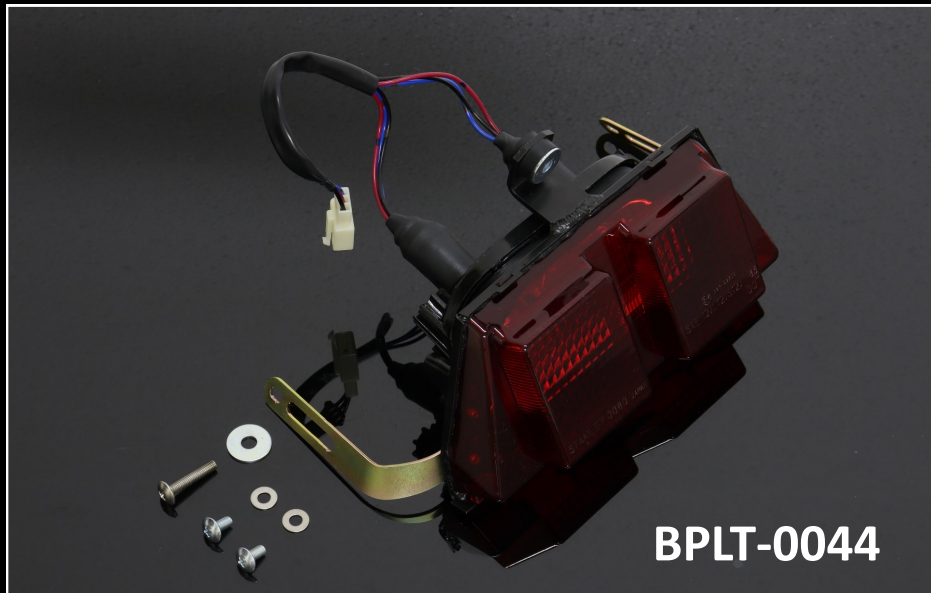



Should you have a tail light bulb blow, then changing for a new bulb is a relatively simple job.

First you will need to remove the seat unit to get access to the tail light.

We won't go into the procedure for that, but will move straight to disassembly of the tail light and bulb changing.

The pictures shown are for BPLT-0044, but the method is the same for BPLT-0045.

- 1)** Use a screwdriver to remove the 2x JTST-0412 M4 screws on the back side of the taillight.

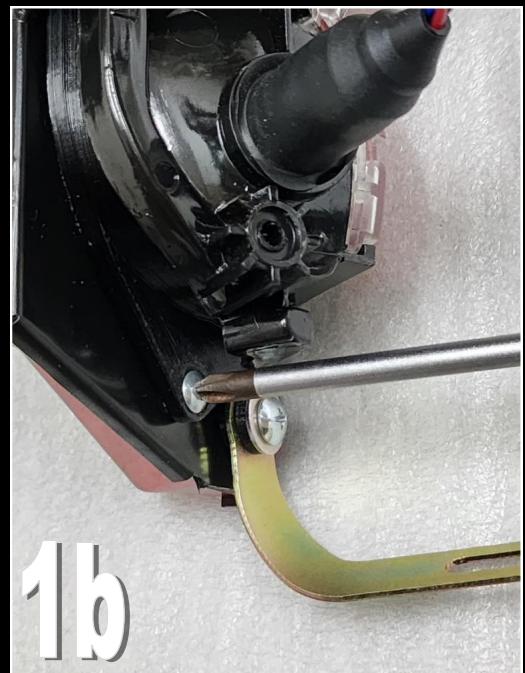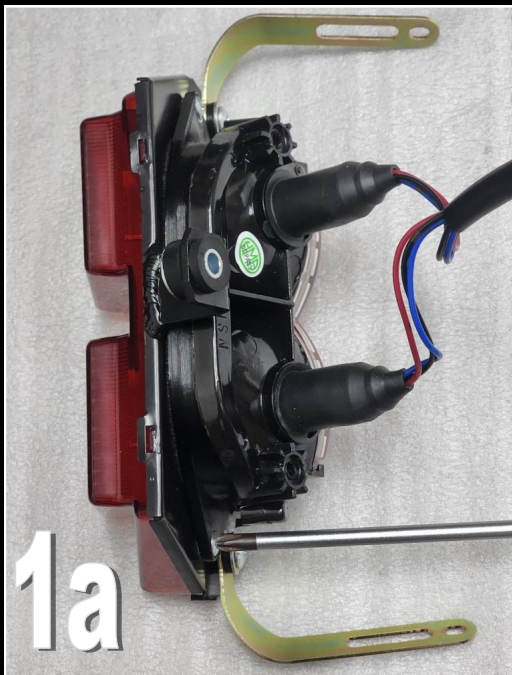

- 2)** Split the two bodies apart and you will gain access to the bulbs.

Note the 2x WPCC-0400 plastic washers. These act as spacers during assembly and are necessary.



3) The bulbs (12V-18W/5W) are bayonet type, so just pop out the old and fit the new.



4) Reassembly is simply reversal of disassembly.

Job done.



www.tyga-performance.com