



MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

UNDERCOWL: BPFL -7028 and BPCL-7028




**Please see photos for correct fitment of mounting stays
for Under Cowl BPFL-7028/BPCL-7028.**

This under cowl is supplied with all the mounting hardware required to install it to the MSX125 Grom. Please study the photos for correct installation and orientation. There are four stays, all supplied with a clip, a cap head bodywork bolt and plastic washer.


The first job is to install the stays. At this stage install hand tight so that stays can be adjusted if necessary.



1) Front left stay uses the thermostat mounting bolt and fitted as shown in the photo.

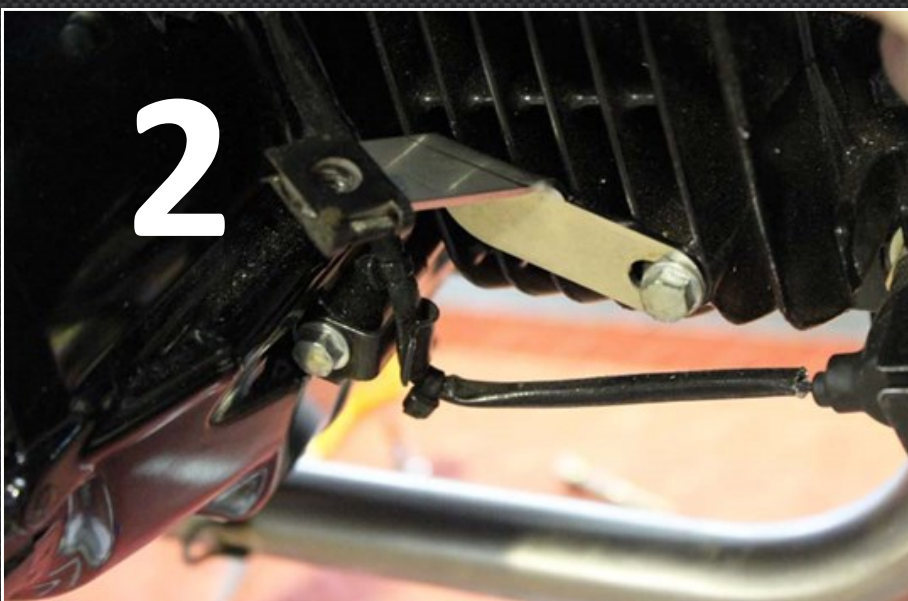

2) Front right is supplied with M6 bolt and mounts on the threaded hole on the cylinder.

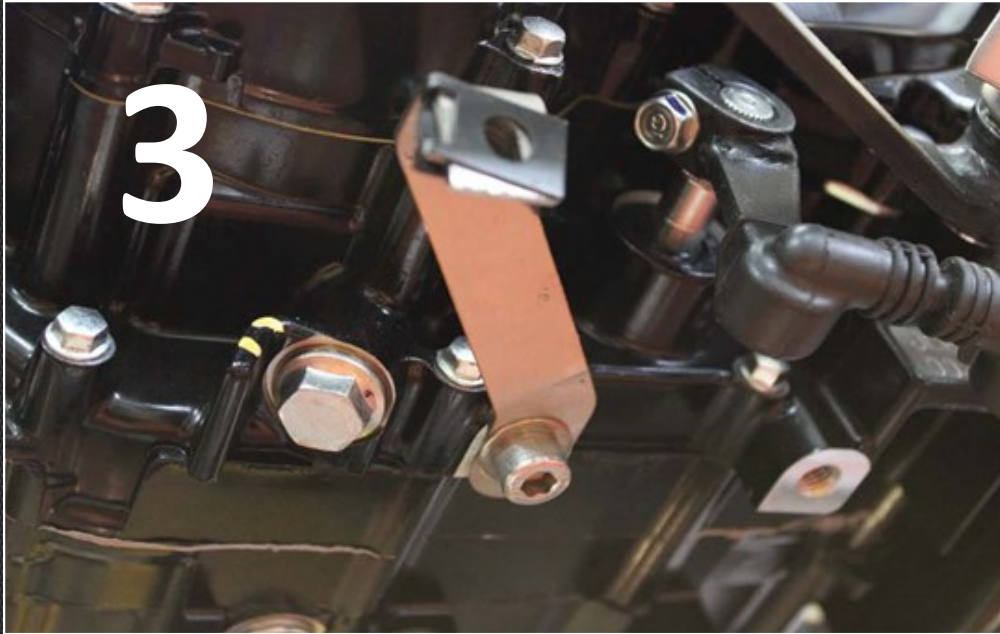

3) Rear left stay mounts on the underside of the engine using the M8 bolt provided by installing it in the threaded hole as shown in the photo.



4) Rear right stay mounts on the underside of the engine using the M8 bolt provided by installing it in the threaded hole as shown in the photo.

After mounting the stays to the engine, carefully offer up the lower cowling. Trial fit at first and make sure there is clearance around all the edges and make necessary adjustments on stays by removing under cowl and adjusting the clips on the stay in the slots, rotating the stays etc. When you are satisfied the stays are in the perfect place, tighten up the stays where they mount to the engine and install under cowl and tighten bolts mounting the under cowl to the stays. Some final adjustment may be necessary but by trial and error a perfect position is attainable.



More awesome TYGA-Performance products for the HONDA MSX125/GROM:



www.tyga-performance.com